



**User instruction for SEM210X electrical apparatus for use in a hazardous area.
Important: Read and understand this document before any installation.**

ATEX & IECEx Instructions



For safe installation of the SEM210X in hazardous areas the following instructions must be observed. The transmitter must be installed by competent personnel, who are familiar with national and international laws, directives and standards that apply to their region. For installation in European Economic Area (EEA) member countries users must follow requirements for electrical equipment for use in potentially explosive atmospheres, e.g. EN60079-14 & EN60079-17. This instruction sheet describes installation, which conforms with BS EN60079-14 & BS EN60079-17. Important - Particular attention must be paid to the section titled "Special conditions for safe use", failure to comply to this requirement will result in an unsafe system.

The SEM210X has been issued with a EU-type examination certificate, confirming compliance with European ATEX directive 2014/34/EU for the following specification :-

Product Information

The following Information is printed on the product label

Manufacturer Status Instruments Ltd
Type Number SEM210X
Certificate Ref EMT16ATEX0005X

Zones

Area Classification		Zone Criteria for Application Atmosphere
Gases	Dusts	
Zone 0	Zone 20	Present continuously or for long periods (> 1000 hours per annum)
Zone 1	Zone 21	Likely to occur in normal operation occasionally (> 10 to < 1000 hours per annum)
Zone 2	Zone 22	Unlikely to occur in normal operation (< 10 hours per annum)

Classification

Example of Type and Range shown below

Working Parameters

	Terminals
	+ / -
Ui =	30 V
Ii =	100 mA
Pi =	750 mW
Ci =	0
Li =	0
Uo =	-
Io =	-
Po =	-

Additional Information

EMC BS EN 61326-1
 (Sensor wires maximum length 3 metres to comply.)
Enclosure Colour Blue

Every effort has been taken to ensure the accuracy of this document, however we do not accept responsibility for damage, injury, loss or expense resulting from errors and omissions, and we reserve the right of amendment without notice.



Status Instruments Ltd, Status Business Park, Gannaway Lane, Tewkesbury, Gloucestershire, UK, GL20 8FD
Web Page: www.status.co.uk Tel : +44 (0) 1684 296818 Fax: +44 (0) 1684 293746

Special conditions for safe use



1. a) For gas applications, the SEM210X temperature transmitters must be mounted in an ATEX/IECEx approved enclosure rated for IP54 and located in an area where the enclosure will not be subject to impact or friction
- b) For dust applications, the SEM210X temperature transmitters must be mounted in a suitably ATEX or IECEx certified enclosure appropriate for the zone of end use.
2. The equipment shall only be configured by means of the USB connection outside the hazardous area.
3. If the equipment is mounted in an enclosure with separate IS circuits, appropriate segregation shall be provided in accordance with IEC 60079-11 Clause 6.2.1.
4. Only suitable for connection to Thermocouple(s), RTD temperature sensor(s) or slide wire resistance devices or a simple apparatus. They shall conform to the requirements for simple apparatus as defined in IEC 60079-11 clause 5.7 and shall meet the dielectric withstanding requirements of IEC 60079-11 clause 6.3.13. The insulation must be capable of withstanding an r.m.s a.c. test voltage of $2U + 1000V$, with a minimum of 1500V r.m.s., where U is the sum of the voltages of the intrinsically safe and the non-intrinsically safe circuit.
5. The ambient temperature range of the enclosure will limit the permitted ambient range of the overall equipment. Refer to enclosure certification.


Maintenance

The appropriate regulations concerning maintenance, repair and testing must be observed. In particular, all parts on which explosion protection depends must be checked during maintenance. The transmitter must never be configured in the hazardous area, the device must be removed and taken to a non hazardous area for configuration.

The enclosure used to house the SEM210X must be cleaned regularly to prevent build up of excessive dust layers.

The SEM210X apparatus contains no user serviceable adjustable, replaceable parts. No attempt should be made to repair a SEM210X device, all units must be returned to the manufacturer for repair or replacement. Attempted service or replacement of parts may invalidate the explosive protection features of the SEM210X.

Mechanical Detail

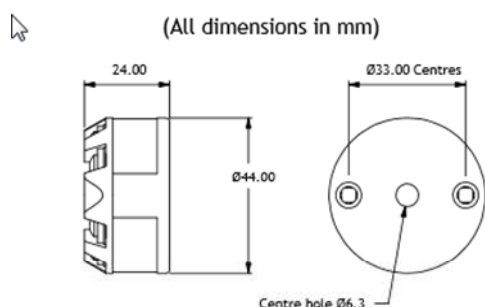

The SEM210X is mounted using two holes, on standard 33 mm fixing centres and will fit a DIN standard termination head. The SEM210X must be installed with adequate protection from moisture and corrosive atmospheres. Refer to "special conditions for safe use" section of this user guide for information on enclosure IP rating.

Care must be taken to ensure the SEM210X is located to ensure the ambient temperature does not exceed the specified operating temperature as specified in the "TEMPERATURE CLASS" table.


A 6.3 mm hole is provided in the centre of the transmitter for sensor wires.

The sensor wires may also be fed on the outside of the transmitter.

Electrical Detail



REFER TO CONDITIONS FOR SAFE USE

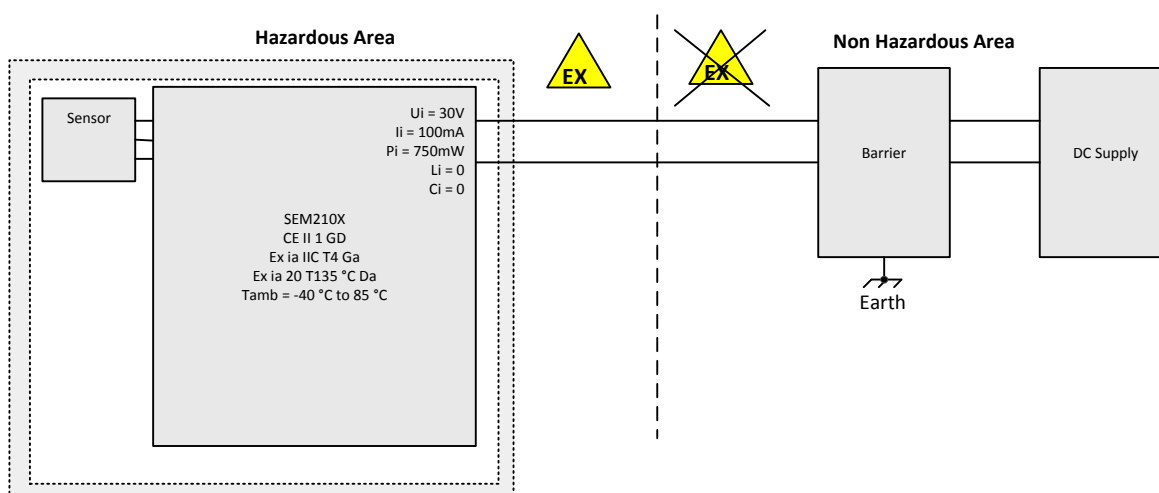

Sensor wires must be isolated from earth breakdown voltage 500 V dc




For SEM210X specification please refer to product data sheet. Installation is normally performed in the following order. If the SEM210X has been purchased as part of a probe assembly ,steps (1 to 3) will have been completed. The user may wish to reconfigure the transmitter range, in this instance the SEM210X range can be changed on a completed probe assembly by following step 1.

1. Configuration
2. Mount Transmitter into head
3. Wire Sensor
4. Install Assembly
5. Wire (4 to 20) mA Loop



1. Configuration – Only to be performed in the safe area

Note: - The SEM210X can be configured whilst connected and powered, but a portable battery powered computer must be used to avoid the effects of ground loops if the (4 to 20) mA loop is grounded. This may damage the SEM210X. Only to be performed in the safe area.

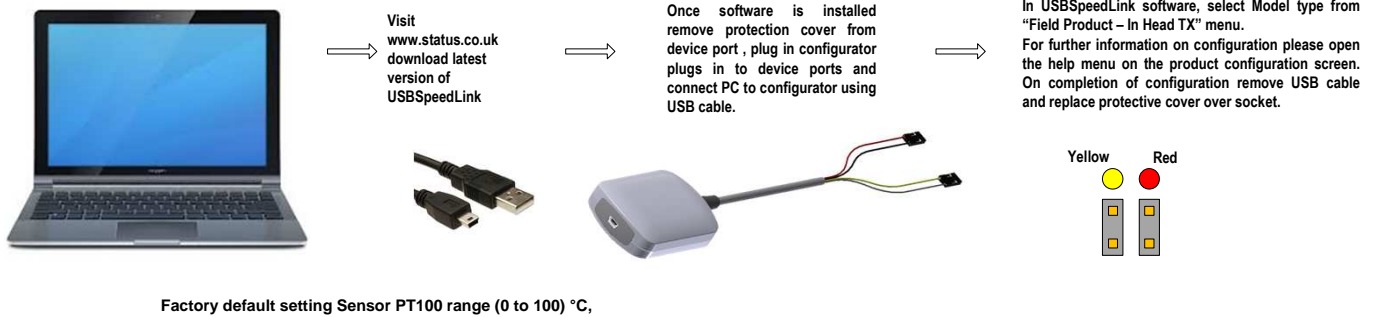

The main configuration is performed using the USB interface. The following parameters may be configured using the powerful USBSpeed link software tool, which also provide operator diagnostics.

The following functions apply :-

SENSOR

- Sensor type mV, Dual mV, ohms, slide wire, thermocouple, dual thermocouple, RTD, dual RTD (2 wire).
- Sensor wire (ohms and rtd ranges only) 2, 3, or 4 wire.
- Thermocouple type Download from USBspeedlink expanding library, common type K,J,T,E,R,S,N,B,U,G,C,D.
- Thermocouple CJ Fixed or Auto.
- RTD type Download from USBspeedlink expanding library, common type PT100, PT1000, PT500, Ni, CU, KTY series.
- Sensor(s) Fail Value on sensor A, (sensor B) fail.
- Sensor Pre-set Override sensor signal with pre-set value, primary function diagnostics.

PROCESS

- Scaling Scale sensor signal to PV, options - Off, Two point scaling or (4 to 22) step profile.
- Units Set PV units

mA Output

- Damping Profile out damping (0 to 32) seconds.
- Range Range (PV units) For (4 to 20) mA output.
- Fix Loop Current Fix loop current to pre-set value (Note resets on power up) . Primary use Diagnostics.
- Set Max mA Set the maximum output current (20 to 23)mA.
- Set min mA Set minimum output current (3.5 to 4.0) mA.
- Trim Read set and reset (4 and 20) mA Trim values.

DIAGNOSTICS

- Power ups Number of power ups from manufacture.
- Min Max PV Minimum and maximum process variable value during operation with reset.
- Operating times From manufacture and calibration. Calibration time is resettable.
- Calibration Store Date, operator and certificate number.
- Save Data Save transducer data to text file.

DIAGNOSTCS LOG

- Type 150 point non volatile Process Variable log, with power off indication and sensor fail (not time stamped).
- Rates User set log periods seconds 5, 15, 30 minutes 1, 2, 5, 10, 20, 30, or 60.
- Backup Save log to PC in CSV style format (using semi colon delimiter) for easy export to text editor or spreadsheet.

PROCESS DATA


- Data Live data for sensor (TV) ,pre-scaling, post scaling (PV), Untrimmed mA output, Actual mA output, % output signal and device ambient temperature (SV) (cold junction).
- Diagnostics Sensor wire error detect (not supported in mV mode), Loop power detect.

2. Mount Transmitter into Head


The SEM210X is mounted using two holes, on standard 33 mm fixing centres and will fit a DIN standard termination head. The SEM210X must be installed with adequate protection from moisture and corrosive atmospheres. Refer to "special conditions for safe use" section of this user guide for information on enclosure IP rating. A centre hole is provided in the SEM210X case, this allows for sensor wire to enter wiring section through the SEM210X body. Observe the "special conditions for safe use" instruction.

3. Sensor Connection


4 Wire Resistance (RTD)

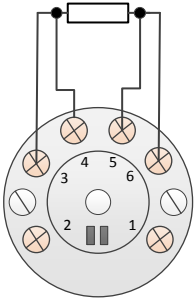


3 Wire Resistance (RTD)

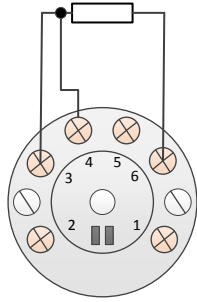



2 Wire Resistance (RTD)

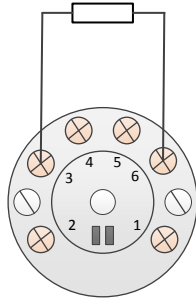


Dual RTD (2 wire)
No Redundancy

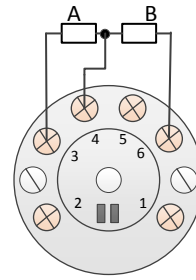


Slide Wire

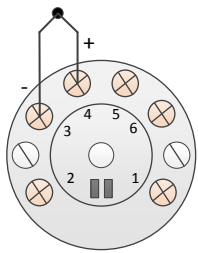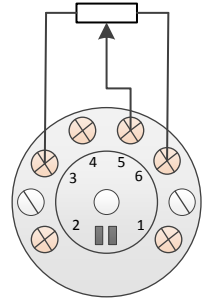


Thermocouple

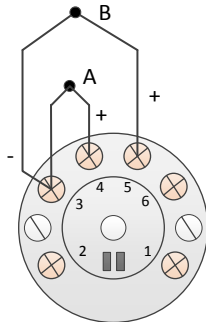

Dual Thermocouple

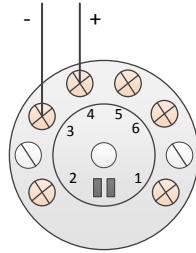

mV

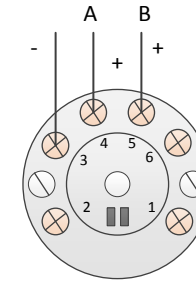

Dual mV

4. Install assembly

Care must be taken to ensure the SEM210X is located to ensure the ambient temperature does not exceed the specified operating temperature (-40 to 85) °C

5. Wire (4 to 20) mA Loop

Ensure all other aspects of the installation comply with the requirements of this document, paying particular attention to the loop barrier. The (4 to 20) mA loop is connected as follows:-

