

Shark Tail Handheld Probe - Heavy Duty Needle Probe

Heavy Duty Needle Probe, 6mm x 120 or 300mm



KEY FEATURES

IP67 rated

Torque & tensile tested

Antimicrobial handle

Ergonomically designed

These heavy duty needle handheld sensors have an ergonomically designed handle for ease of use. The handle also contains an antimicrobial substance which kills microorganisms, making it ideal for the food industry or applications where cleanliness is paramount.

The solid handle and cable have also been tested for torque and tensile strength. The curly polyurethane cable is 2 metres long (extended) with a moulded on connector in IEC, ANSI or JIS colours.


The handle has been tested to IP67, which means it is totally protected against dust ingress and protected against short periods of immersion in water (see below for further details).

LAB127-0117

Specifications

Probe length:	150 or 300mm
Probe Diameter:	4 or 6mm
Cable Length:	2 metres (extended)
Cable termination:	K or T Miniature plug (IEC 584 or ANSI MC96.1)
Probe temperature range:	Type 'K' -50°C to +260°C Type 'T' -50°C to +260°C

Sensor type:	Heavy duty thermocouple, Type K or T.
Construction:	Needle point tip, 316 stainless steel
Element/hot junction:	Single element, grounded junction offering fast response.
Cable:	2 metre Polyurethane (extended), colour coded in accordance with IEC, ANSI or JIS with moulded on miniature plug.

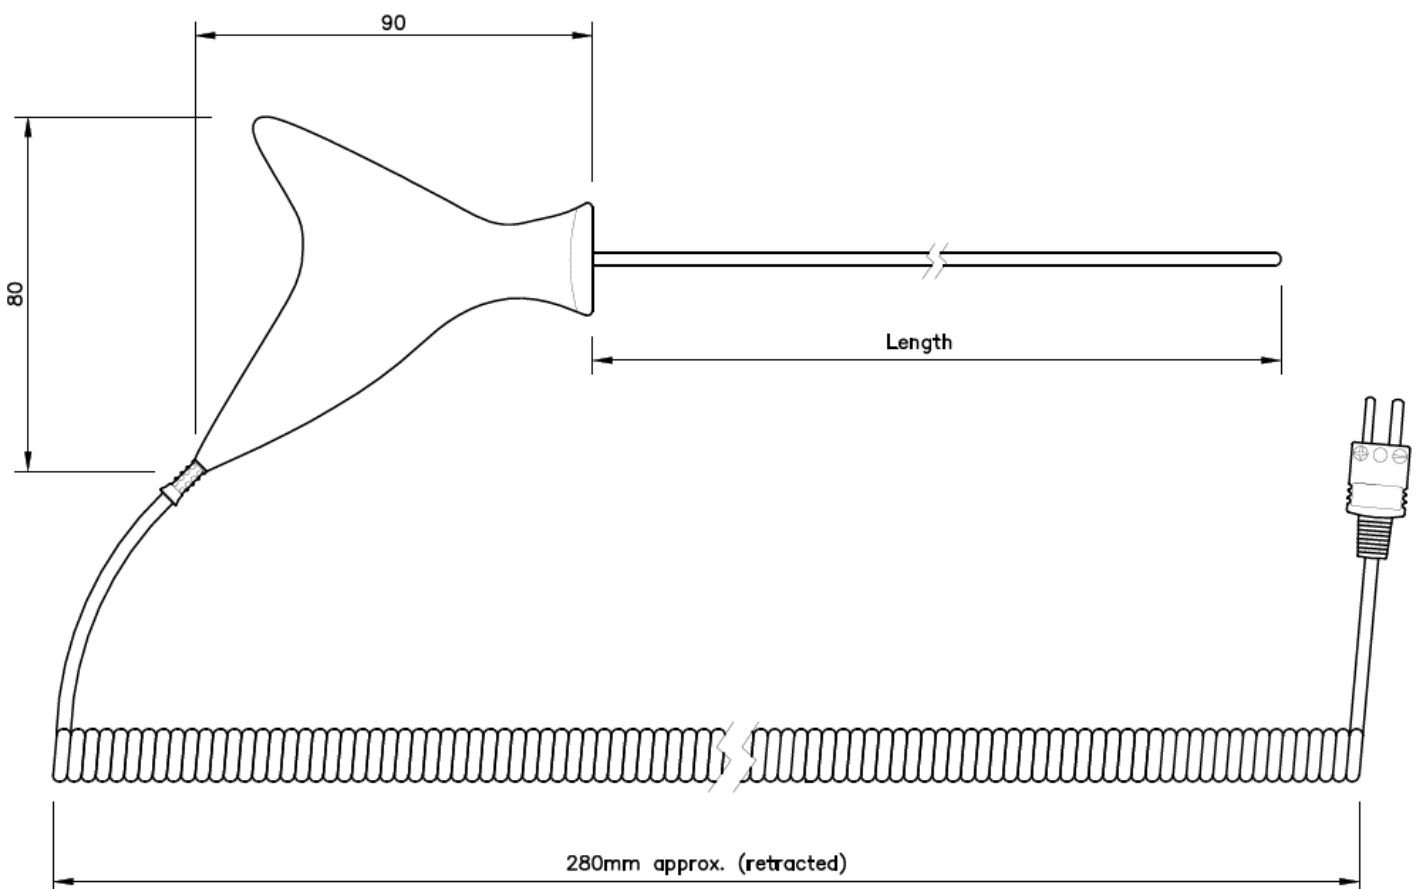

What is IP67?

The IP Code, International Protection Marking, sometimes misinterpreted as Ingress Protection Marking, classifies and rates the degree of protection provided against the intrusion (including body parts such as hands and fingers), dust, accidental contact, and water by mechanical casings and electrical enclosures.

Solid particle protection

The first digit indicates the level of protection that the enclosure provides against access to hazardous parts (e.g., electrical conductors, moving parts) and the ingress of solid foreign objects.

Level	Object size protected against	Effective against
6	Dust tight	No ingress of dust; complete protection against contact (dust tight)

Liquid ingress protection

The second digit indicates the level of protection that the enclosure provides against harmful ingress of water.

Level	Protected against	Testing for	Details
7	Immersion up to 1 m	Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 1 m of submersion).	Test duration: 30 minutes Immersion at depth of at most 1 m measured at bottom of device, and at least 15 cm measured at top of device.

